



2211 E Indian School Rd, Phoenix, AZ 85016 Phone: 602-840-4205

2014-Later Batwing Fairing Headlight Adjustment Ring (patent pending)

1. Remove fairing trim ring.
2. Remove the four screws holding the headlight assembly.
3. Remove headlight and disconnect.
4. Slip adjustment ring over wiring and reconnect.
5. Install headlight assembly with adjustment ring using supplied screws. Long screws in top holes, short screws in bottom holes.
6. Reinstall fairing trim ring.

