

**SPORT GLIDE CUSTOM
FENDER ADAPTER
INSTALL
INSTRUCTIONS**




4

3

2

1

ITEM NO.	Part Num	DESCRIPTION	QTY.
1	SBHCSREW 0.19-32x0.5-HX-C	Button Head Cap Screw	2
2	Regular LW 0.19	Lock Washer	2
3	IFRS	Inverted Fork Rock Shield	1
4	IFFB-T-OEM-13E	Inverted Fork Fender Bracket Top Black L/R	1
5	IFFB-U-OEM-13E	Inverted Fork Fender Bracket Upright R/L	1
6	SCHCSREW 0.25-20x1x1-HX-C	Flat Head Socket	1
7	SPS 0.1875x0.375	Slotted Spring Pin	1
8	Regular LW 0.3125	Lock Washer	2
9	Preferred Narrow FW 0.3125	Flat Washer	2
10	HBOLT 0.3125-18x0.5x0.5-C	Hex Head	2

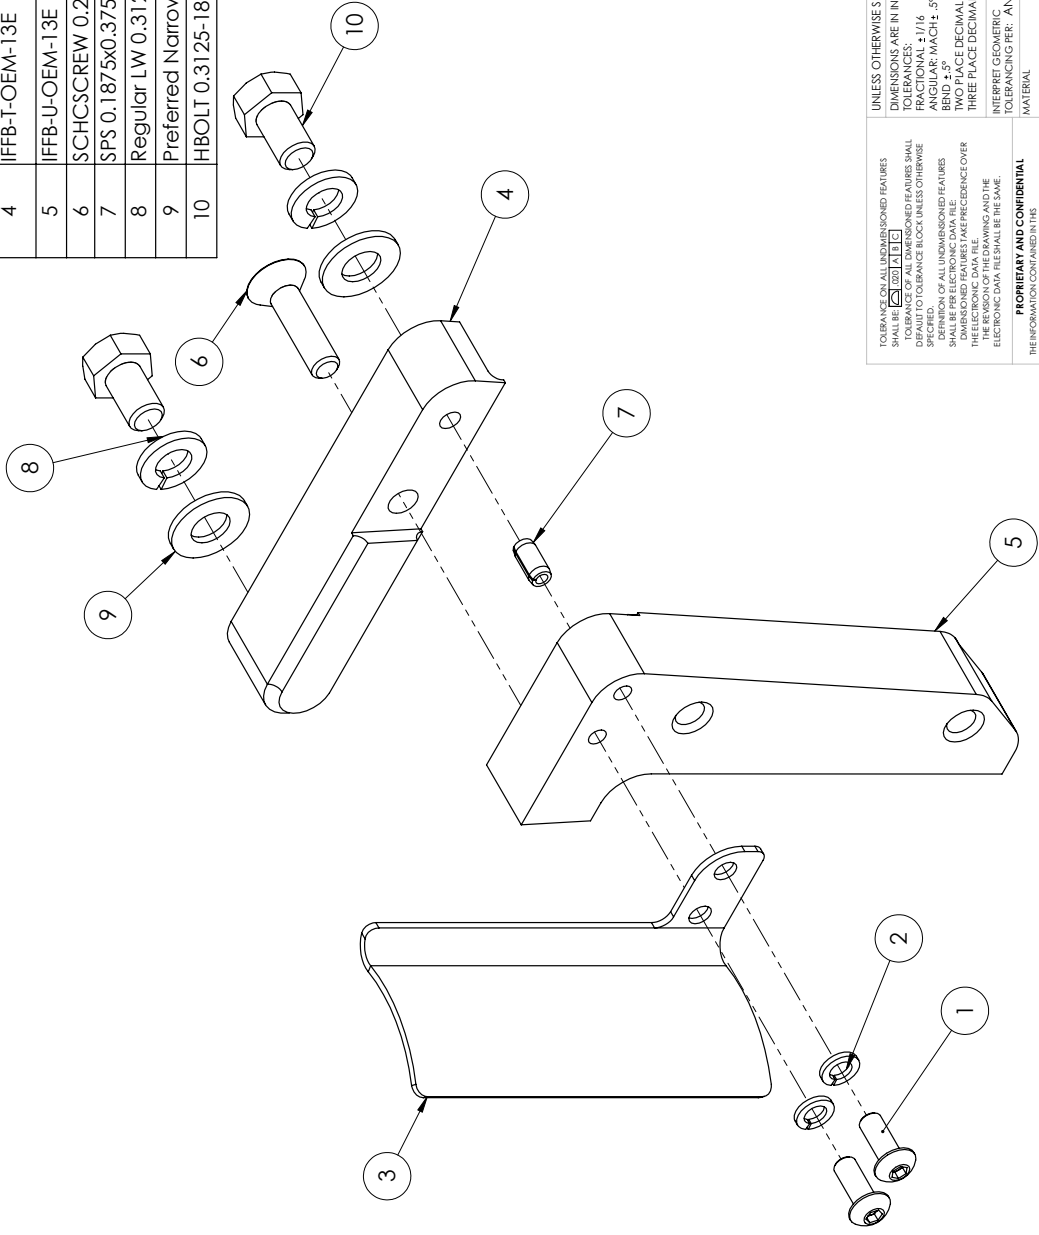

RIGHT SIDE SHOWN

4

3

2

1



TITLE:
Sport Glide Fender Adapter
18L L/R

SIZE PART. NO. REV
B PYO-SGFA-18L **B**

SCALE: 1:1 WEIGHT: SHEET 1 OF 1

UNLESS OTHERWISE SPECIFIED:
 DIMENSIONS ARE IN INCHES
 TOLERANCES:
 FRACTIONS: ±0.005
 DECIMALS: ±0.010
 ANGULAR: MACH ±.5°
 BEND ±.5°
 DIMENSIONS FEATURES TAKE PRECEDENCE OVER THE ELECTRONIC DATA FILE.
 DIMENSIONS AND TOLERANCES SHALL BE THE SAME.
 TOLERANCING PER: ANSI Y14.5

PROPERTY AND CONFIDENTIAL
 THIS DRAWING IS THE SOLE PROPERTY OF PAUL YAFFE ORIGINALS AND PAUL YAFFE DESIGNS, INC. ANY REPRODUCTION OR DISTRIBUTION OF THIS DRAWING WITHOUT THE WRITTEN PERMISSION OF PAUL YAFFE ORIGINALS AND PAUL YAFFE DESIGNS, INC. IS PROHIBITED.

DO NOT SCALE DRAWING

NAME DATE
 J. Eichman 6/24/2020

DRAWN CHECKED
 ENG APPR. MFG APPR. Q.A.

COMMENTS:
 BREAK ALL SHARP EDGES .010-.020

A

B

Thank you for purchasing Paul Yaffe's Bagger Nation products. Please read through these instructions completely before attempting installation.



1.
Check the contents for missing hardware

2. Using (2) 5/16 x 1/2" bolts, flat washers & lock washer provided assemble adapter block marked "R" on right side of fender.



2.



3.

Note: Right & Left are determined when sitting on bike.

Right = Air cleaner side

Left = kickstand side (Fig #2)

The "R" faces outside surface of fender only finger tight at this time (Fig #3)



3. Slide fender in place over tire & repeat step #2 only this time with the bracket marked "L" on the left side (Fig # 4) Again finger tight only.

4. Raise fender into position and reusing your stock fender mounting bolts, install fender (Fig #5)

Tighten block bolts at this time.




5. While pushing lightly down on the front tip of fender, tighten the (4) 5/16 x 1/2" bolts paying attention while tightening to the rear of fender staying centered over tire.



6. Install debris guards on right & left sides. Check fender fastener torque & gently turn wheel from side to side for clearance. Squeeze front brake & depress fork checking for paper travel clearance. (Fig #6)
7. Now go ride your badass looking Sport Glide & tell you friends where your fender came from!!

Thanks for choosing Bagger Nation Designs!

A handwritten signature in black ink, likely belonging to the creator of Bagger Nation Designs. The signature is stylized and cursive, with the letters 'B' and 'N' being particularly prominent.

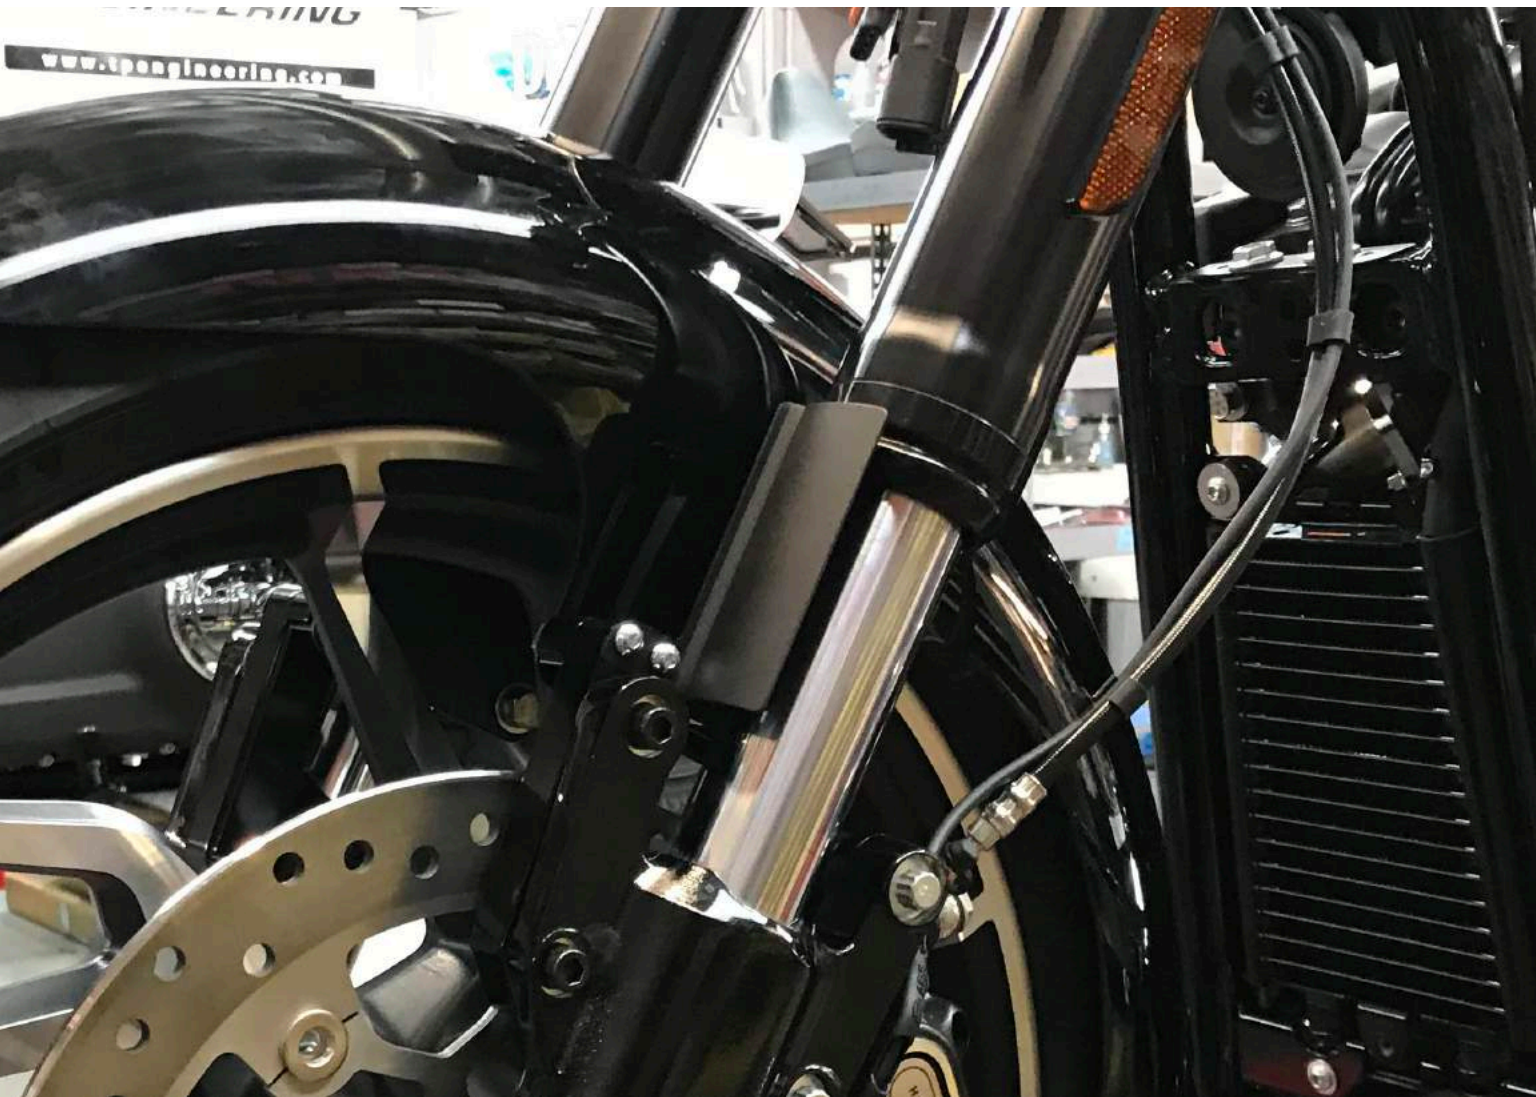

Paul Yaffé's
Bagger
Nation™

602.840.4205
BAGGERNATION.COM