

Lid Lifter Installation Instructions for CVO / Boom Audio Applications



1. With flat head Allen still installed, drill cam end threads out with a 13/64 drill bit until drill bit contacts installed Allen as shown




2. Remove flat head Allen using a 5/32 Allen Wrench

Paul Yaffé's
Bagger
Nation

www.baggernation.com

602-840-4205

Lid Lifter Installation Instructions for CVO / Boom Audio Applications

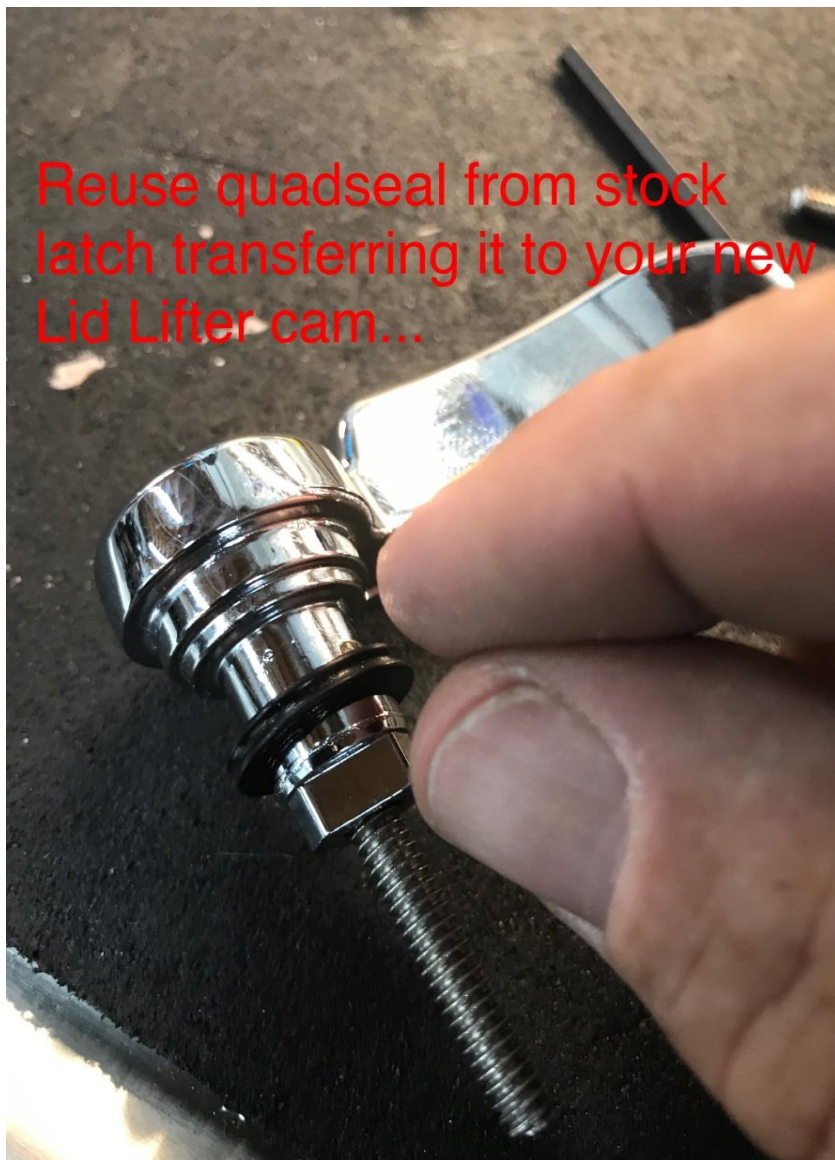

3. Reuse quadseal from stock latch, transferring it to your new Lid Lifter cam



4. Quad seal installed

Paul Yaffe's
Bagger
Nation

Lid Lifter Installation Instructions for CVO / Boom Audio Applications



Install provided
flat head screw
into Lid Lifter and
secure with OEM
nut....

5. Install provided flat head screw into Lid Lifter and secure using OEM nut



Ready for install on CVO
model

6. Ready for install on your CVO model

Paul Yaffe's
Bagger
Nation™